


Single Gas Stove

Smart and portable single gas stove, ensures you have many opportunities to cook while you are in the nature. The flame can easily be adjusted as needed via the knob. The stove has a high output of 6800 watt, which means that the water will boil very quickly. Efficient support for kettle or pans to ensure they are safely placed in the right place. A transport bag with handle is included, so you easily can take the stove with you on your next trip. The whole unit can be stored in the top drawer in the kitchen of the Hero Camper when you are not using it or simply want more kitchen countertop space when cooking in your Hero Camper.

Layout

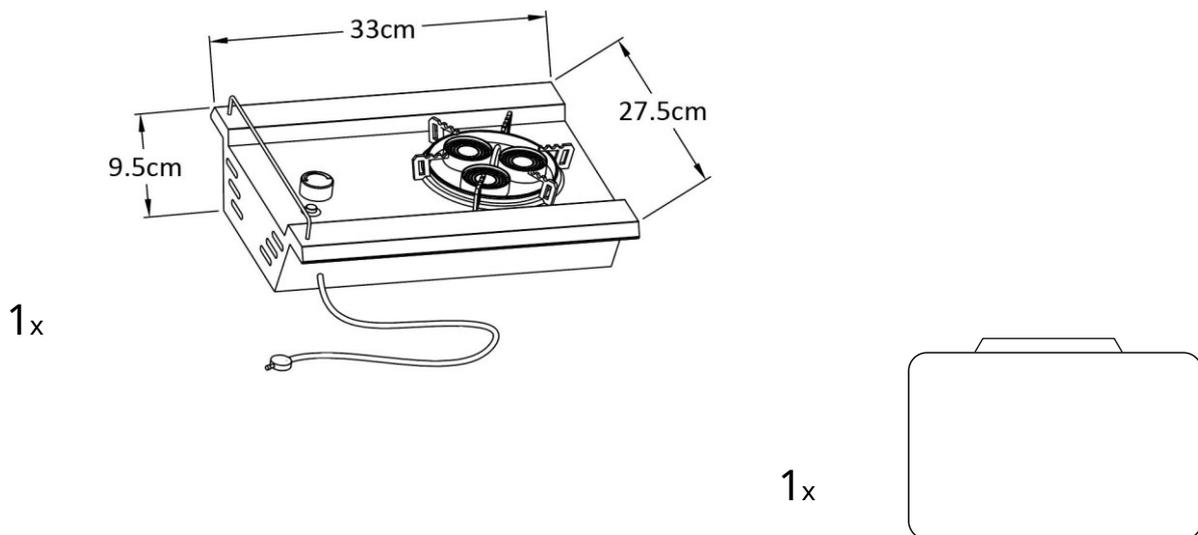

Specifications

Material	SS304 & Aluminium
Size(HxLxW)	9.5x27.5x33cm
Color	Black & Silver
Battery	1xAA (not included)
Weight	2.3kg
Output	1x6800W
Max Gas consumption	447g/h
Item No.	OD1437



#HeroCamper™ - www.herocamper.com

Lammefjordsvej 5 - 6715 Esbjerg N - Denmark


Phone +45 7022 5840 - sales@herocamper.com

VAT No DK - 40193189


Version 30-09-2022

Assembly instructions


1. Insert 1xAA battery. Installation is located on the bottom of the stove.

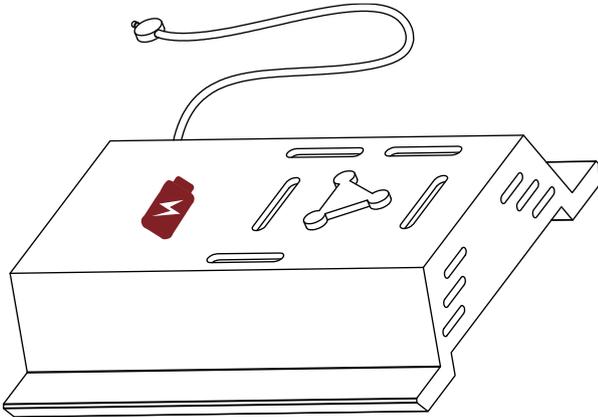


2. Press the ignition button to check if the ignition is function correctly.

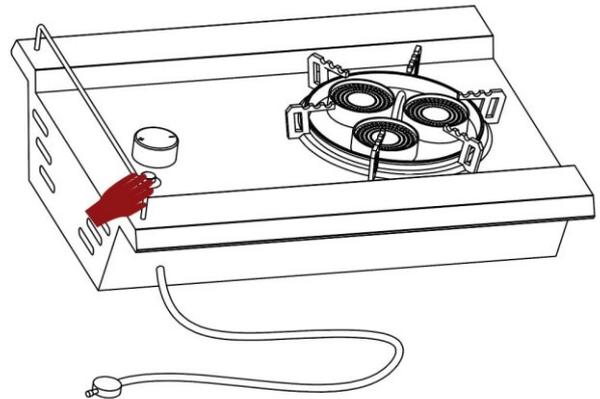

3. Connect gas container to the stove.

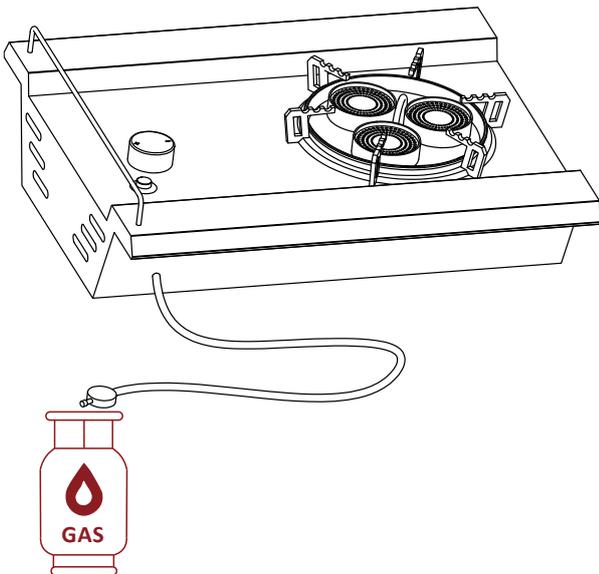

4. Press the ignition button and adjust to desired power.

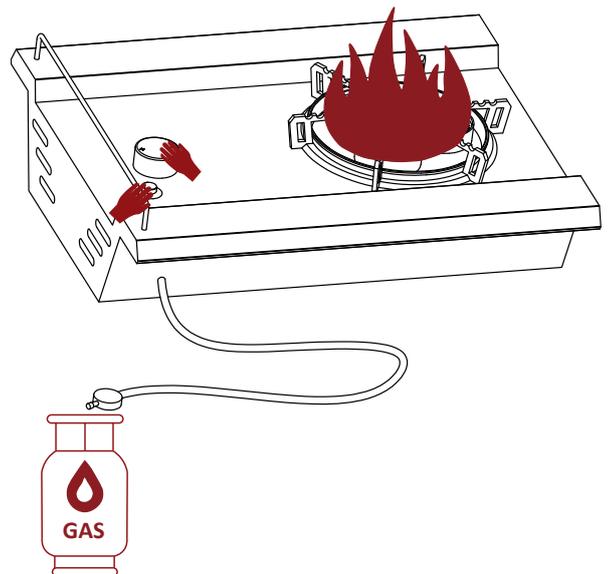

Cleaning instructions

- The outside of the stove can be wiped clean with a mild combination of dishwashing soap and water and finished off with a dry cloth. Do not use abrasive pads.
- Recommended to clean the burner with a dry brush at least annually. Ensure that the burner is free of any obstructions.
- Occasionally clean the point of the piezo plug with a brush.

Safety instructions



Warning: Carbon monoxide. Only for outdoor use. This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space may cause death. Do not use oversized cooking devices. Do not use as space heater for any purpose other than cooking. Only use certified gas containers. Remove any protection material before use. Do not use this appliance if it has damage or worn seals. Do not use this appliance if it is leaking or does not operate properly. If the appliance cannot be adjusted to perform correctly it should not be used until serviced or repaired. Gas containers shall only be changed in a well-ventilated location, preferably outside, away from people and away from sources of ignition; such as flames, electric heaters or similar equipment. Do not try to detect leaks using a flame. This appliance must only be serviced by an authorized person. Do not modify this appliance. Do not use the appliance in sand or gravel surfaces. Avoid using the appliance in very windy conditions. Do not place articles on or against this appliance. Do not place chemicals or flammable materials or spray aerosols near this appliance. Check that the burner is fully extinguished before disconnecting the gas container. Keep children away from this appliance. Keep the cartridge compartment out of direct sunlight.

Recycling



Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection / recycling center. In the European Union there are separate collection systems for used electrical and electronic products.

Please help us conserve the environment we live in!